

Kvaser Air Bridge Installation Guide

Copyright 2021-2026 Kvaser AB, Mölndal, Sweden
https://www.kvaser.com

Printed Wednesday 18th February, 2026

We believe that the information contained herein was accurate in all respects at the time of printing. Kvaser AB cannot, however, assume any responsibility for errors or omissions in this text. Also note that the information in this document is subject to change without notice and should not be construed as a commitment by Kvaser AB.

(This page is intentionally left blank.)

Contents

1 About this document **4**

2 Introduction **5**
2.1 What is Kvaser Air Bridge? 5
2.2 Kvaser Air Bridge Light vs Kvaser Air Bridge 'one-to-any' 6

3 Kvaser Air Bridge Operation **8**
3.1 Spectrum availability and co-existence 8
3.2 Radio link establishment 8
3.3 Transmission and reception of messages over radio 9
3.4 CAN connection 10

4 Radio guidelines **11**
Rule 1. Minimize distance between devices while keeping line-of-sight . . 11
Rule 2. Align devices with each other 12
Rule 3. Keep devices away from walls 13
Rule 4. Optimize Kvaser Air Bridge device heights 15
Rule 5. Reduce interference from other emitters 17
Rule 6. Adjust location or heights 18

5 Radio propagation considerations **19**
5.1 Antenna radiation 19
5.2 Polarization 19
5.3 Free space propagation 20
5.4 Attenuation 20
5.5 Reflection 20
5.6 Multipath interference 20

6 Radio performance considerations **21**
6.1 Signal to noise ratio 21
6.2 Link margin 21
6.3 Interference by other emitters 22
6.4 Interference countermeasures 23

7 Document Revision History **24**

1 About this document

This document provides guidance for installing the Kvaser Air Bridge devices in different physical environments. It consists of an introduction to Kvaser Air Bridge, followed by radio guidelines and more detailed considerations that aim to give you a complete understanding of how to maximize the Kvaser Air Bridge's radio performance. Use Section 4, Radio guidelines, on Page 11, as a quick reference for any stationary installation or as a valuable tip for use of the Kvaser Air Bridge in general.

The Kvaser Air Bridge System Integration Guide, provides design-in advice for system integrators who use Kvaser Air Bridge as a system component and want to make the most of its data bridging capability.

2 Introduction

The Kvaser Air Bridge product family consists of the following product variants:

Device	Product Number	Firmware version
Kvaser Air Bridge Light HS	73-30130-00808-3	2.4.0
Kvaser Air Bridge Light HS (FCC)	73-30130-01008-6	2.4.0
Kvaser Air Bridge Light HS M12	73-30130-01141-0	2.4.0
Kvaser Air Bridge Light HS M12 (FCC)	73-30130-01148-9	2.4.0
Kvaser Air Bridge M12	73-30130-01494-7	2.4.0

Table 1: Kvaser Air Bridge devices and their EAN numbers.

Whilst the four Kvaser Air Bridge Light HS variants are purchased in sets of two devices which have been statically paired with each other, the last variant, Kvaser Air Bridge M12, is a 'one-to-any' device which can be paired freely with any other 'one-to-any' device. It is therefore purchased as a single device to allow for any number of devices to be acquired.

The (00808-3 and 01141-0) Kvaser Air Bridge Light HS variants are approved for the European Union, while the (01008-6 and 01148-9) Kvaser Air Bridge Light HS (FCC) variants are optimized for the US. They both share the same functionality but have different radio transmitting schemes due to regulatory differences. The (01494-7) Kvaser Air Bridge M12 variant is approved for both the European Union and the US.

Note: all Kvaser Air Bridge devices marked with an FCC ID are approved for use in the US.

Over the years, the Kvaser Air Bridge Light HS variants have been subject to gradual improvement realized by a series of firmware releases. However, the differences in features. functionality and performance characteristics related to firmware release are only briefly mentioned in this document and instead, reference is given to version 1.0 of this document for more detailed descriptions of older releases. Refer to the Kvaser Air Bridge user's guides for information on firmware upgrade and on how to find out which firmware resides on each individual device.

To aid readability, the name Kvaser Air Bridge is hereinafter used to refer to the Kvaser Air Bridge product in general. The name Kvaser Air Bridge Light is used to refer to any of the four Kvaser Air Bridge Light HS variants and the name Kvaser Air Bridge 'one-to-any' is used to refer to the more advanced Kvaser Air Bridge M12 variant.

2.1 What is Kvaser Air Bridge?

The Kvaser Air Bridge devices contain radio transceiver that can be used to establish a CAN system bridge for the transfer of messages wirelessly between two CAN bus segments.

All Kvaser Air Bridge devices operate in the so-called 2.4 GHz ISM band. This is an unlicensed frequency band open for applications in industry, science and medical sectors. Equipment using this frequency band includes mobile phones, computers, wireless access points, car alarms, garage door openers, remote-controlled machinery etc.

All Kvaser Air Bridge devices include radio transceivers with power amplifiers that provide the maximum allowed transmit power, ensuring a robust connection and maximizing the communication distance potential. The omni-directional antennas enable transmission and reception in any direction. Provided that the Kvaser Air Bridge devices are mounted favorably, 360-degree coverage can be obtained.

2.2 Kvaser Air Bridge Light vs Kvaser Air Bridge 'one-to-any'

Kvaser Air Bridge Light consists of two statically paired 'one-to-any' devices that enable a simple and straight forward establishment of a CAN system bridge between the two CAN segments to which the Kvaser Air Bridge Light devices are connected. The two paired Kvaser Air Bridge Light devices will automatically establish a connection between CAN bus segments without any user interaction.

Kvaser Air Bridge 'one-to-any' is a multi-role device that can be commissioned as either Primary device or Secondary device. A Kvaser Air Bridge 'one-to-any' Primary device can be paired with any Kvaser Air Bridge 'one-to-any' Secondary device. The pairing feature provides the automatic discovery of all available Kvaser Air Bridge 'one-to-any' Secondary devices within reach of the radio signals. This information is transferred to the user application at the Kvaser Air Bridge 'one-to-any' Primary device, which can thereby select freely which Kvaser Air Bridge 'one-to-any' Secondary device to pair with.

Pairing with a preferred Kvaser Air Bridge 'one-to-any' Secondary device is also possible without it being within radio reach. The actual pairing procedure is then completed once the devices are within reach of each other. As long as two Kvaser Air Bridge 'one-to-any' devices have been paired with each other, a connection will automatically be established between the CAN bus segments to which they are connected, provided that the two Kvaser Air Bridge 'one-to-any' devices are within reach of each other. No other interaction is required.

The pairing of the Kvaser Air Bridge 'one-to-any' devices is carried out through the exchange of special messages exchanged over the CAN bus interface, the so called Management Interface which is described in a separate document. The Management Interface also embodies all the features related to commissioning of the Kvaser Air Bridge 'one-to-any' devices, but does not apply to the Kvaser Air Bridge Light.

To commission the Kvaser Air Bridge devices, a special Kvaser Air Bridge Utility CLI is available. The Kvaser Air Bridge Utility CLI facilitates the commissioning of the devices and the configuration of some operational settings; their roles (Primary

device or Secondary device), pairing codes, and CAN bus bit rate. Kvaser Air Bridge Light does not need to be commissioned but the Kvaser Air Bridge Utility CLI can be used to change the CAN bus bit rate.



Commissioning is the procedure employed by the user before putting Kvaser Air Bridge devices into service. The commissioning can be performed using the Kvaser Air Bridge Utility tool or by exchanging special messages between the Kvaser Air Bridge and a user appliction over the connected CAN bus segment. The latter is only possible for Kvaser Air Bridge 'one-to-any' devices.

Refer to the Kvaser Air Bridge Management Interface Description for guidance related to commissioning and management of the devices.

Refer to the Kvaser Air Bridge user's guides for guidance related to the Kvaser Air Bridge Utility CLI.

3 Kvaser Air Bridge Operation

3.1 Spectrum availability and co-existence

As the 2.4 GHz ISM band is made available for many different radio technologies, it is subject to various rules that aim to establish co-existence in areas that are densely populated with transmitters and receivers using the same frequency band. Such rules include spreading the radio energy across the frequency band and preventing simultaneous transmission by radio equipment in close vicinity. It is important to note that although the 2.4 GHz ISM band serves to promote co-existence between radio transceivers, there may be situations where degraded radio communication is experienced.

The Kvaser Air Bridge employs special features to make it a robust radio link, most notably a frequency hopping approach that uses around 40 frequencies. Besides frequency hopping, a special 'Listen Before Transmit' mechanism invokes a 'Clear Channel Assessment' before every transmission. If another radio device is located near the Kvaser Air Bridge device and transmits on the designated frequency, then the data will not be transmitted on that frequency but rather on the next available frequency.

In scenarios with multiple co-existing radio devices in the 2.4 GHz ISM band, there will inevitably be some degradation with respect to data throughput and latency. Kvaser Air Bridge is no exception to this rule, although its high capacity and excellent latency performance provides adequate margin to make it a robust wireless solution in most cases. The design of highly demanding applications might have to consider the performance requirements in relation to the slightly degraded performance that may be the result in a co-existence scenario.



For co-existence scenarios, it is generally recommended that typically no more than five (5) Kvaser Air Bridge pairs are active at the same time. Please contact Kvaser support for more information.

3.2 Radio link establishment

A radio link is automatically established between two Kvaser Air Bridge devices when their radio signals can be mutually received, and provided that they have been paired. For a pair of Kvaser Air Bridge Light devices this is always the case. For Kvaser Air Bridge 'one-to-any' devices, this happens directly following the pairing procedure, provided that the Kvaser Air Bridge 'one-to-any' Secondary device is not already paired and connected to another Kvaser Air Bridge 'one-to-any' Primary device.

If the radio reception is poor due to a week signal level, interference or a combination of the two, the radio link is still maintained even though there is no

exchange of data. However, after a certain time, the Kvaser Air Bridge 'one-to-any' Secondary device will enter a mode in which it will try to re-establish the radio link without transmitting. This will go on indefinitely. In such a situation, and after some time with poor reception, the Kvaser Air Bridge 'one-to-any' Secondary device will become available for pairing with any Kvaser Air Bridge 'one-to-any' Primary device, just like a Kvaser Air Bridge 'one-to-any' device that has not been paired.

A Kvaser Air Bridge 'one-to-any' Secondary device that is paired with another Kvaser Air Bridge 'one-to-any' Primary device cannot be paired with another Kvaser Air Bridge 'one-to-any' Primary device.



Pairing is the process of logically associating a Kvaser Air Bridge 'one-to-any' Primary device with a Kvaser Air Bridge 'one-to-any' Secondary device. The pairing involves special procedures for automatic discovery of nearby Kvaser Air Bridge Secondary devices and measures to prevent unwanted pairing with Kvaser Air Bridge devices belonging to other users.

Refer to the Kvaser Air Bridge Management Interface Description for guidance related to pairing.

3.3 Transmission and reception of messages over radio

As with any radio-based system, a careful and sound installation approach will ensure optimal communication. This concerns the surrounding structures, in addition to other emitters that may disturb the radio communication. Near-by devices may also be using the 2.4 GHz ISM band, or there may be apparatus unintentionally emitting energy in this band.

The Kvaser Air Bridge devices rely on a Time Division Multiple Access scheme based on intervals of 2.4 ms length, so called 'time slots' in which a Kvaser Air Bridge device is either transmitting or receiving. Depending on which is the case, the underlying timing is different, which is why two types of slots are used, i.e. either a transmit slot or a receive slot.

For Kvaser Air Bridge 'one-to-any' devices there is also a third type of slot to accommodate for the pairing feature. This is a random access slot in which Kvaser Air Bridge 'one-to-any' Secondary devices are allowed to respond to a pairing request from a Kvaser Air Bridge 'one-to-any' Primary device. These operate in a random fashion that reduces the risk of collision, which would be the case if two or more Kvaser Air Bridge 'one-to-any' Secondary devices respond at the same time. For Kvaser Air Bridge Light devices, the random access slot does not apply.

Once a radio link is established, the two Kvaser Air Bridge devices involved take turns in transferring messages. The transfer is based on a Time Division Duplex

protocol with a fixed cycle length of 4.8 ms of which each Kvaser Air Bridge device is allocated 50%. The 2.4 ms time slot in each direction provides adequate time for the transmitter and receiver to reliably synchronize and transfer the messages at short latency. For each transmit interval, a new frequency is selected according to a frequency hopping scheme that ensures equal use of the available frequencies. The Kvaser Air Bridge can avoid transmitting on frequencies presently used by other nearby radio devices.



In scenarios involving multiple Kvaser Air Bridge devices, it is recommended that all devices use the same firmware version to optimize performance. Please contact Kvaser support for more information.

3.4 CAN connection

The Kvaser Air Bridge provides a simple approach that preserves many CAN bus features, and it can automatically adapt to the CAN bus bit rates thanks to an autobaud feature.

As the transfer of messages over radio always introduces a certain latency, it cannot support arbitration between the CAN bus segments. This means that a message sent on one CAN bus will be subject to a second arbitration on the other CAN bus after being transferred over the radio link. On the other hand, all messages received on the Kvaser Air Bridge's own CAN bus interface will be directly acknowledged according to the CAN standard, i.e. even before they are transmitted to its paired Kvaser Air Bridge device.



Autobaud is the process of automatically selecting the correct bus parameters for communication on the connected CAN bus based on received CAN traffic.

4 Radio guidelines

Radio signals often “compete” with interfering radio waves or noise. It is the relationship between signal and interference that determines a radio link’s performance, but there’s much that can be done to optimize performance. Different use cases may require alternative approaches that are based to a greater or lesser degree on the rules of thumb given below. In most cases, following just one or two of the rules of thumb will be sufficient. The Kvaser Air Bridge design is based on a robust radio protocol that copes well with interference.

Note that mobile use cases are subject to slightly different considerations regarding performance and that the rules of thumb might not always be possible to follow.

Rule 1.
Minimize distance between devices while keeping line-of-sight

Keep the distance between the Kvaser Air Bridge devices (transceivers) as short as possible (however avoid placing them closer to each other than 0.5 m) and make sure that they are in line-of-sight of each other. If this is not possible, the radio signal will be weakened, limiting the maximum practical distance. The attenuation of a wall, for example, depends on its material and thickness.

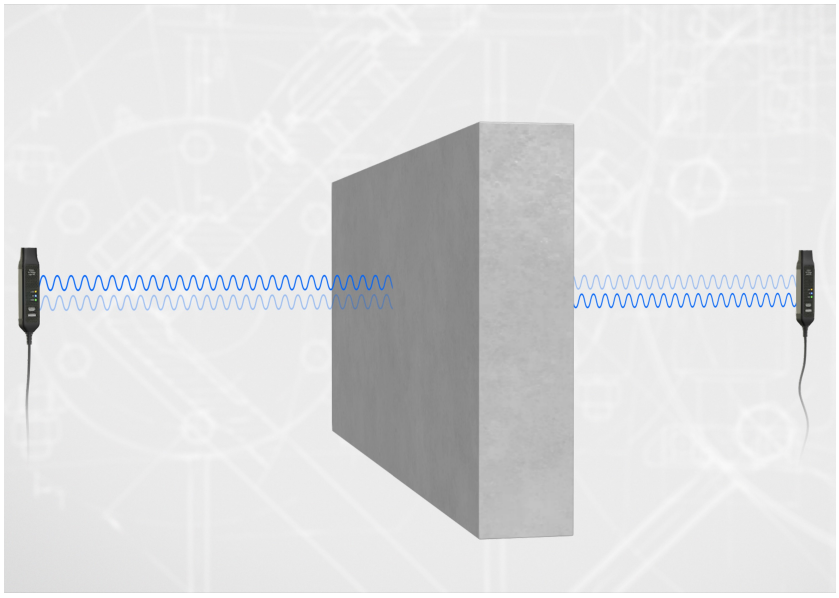

Figure 1: Radio signals are weakened if devices are not in direct line-of-sight.

Try to avoid having obstacles very close to the line-of-sight path as this too may result in a weakened signal.

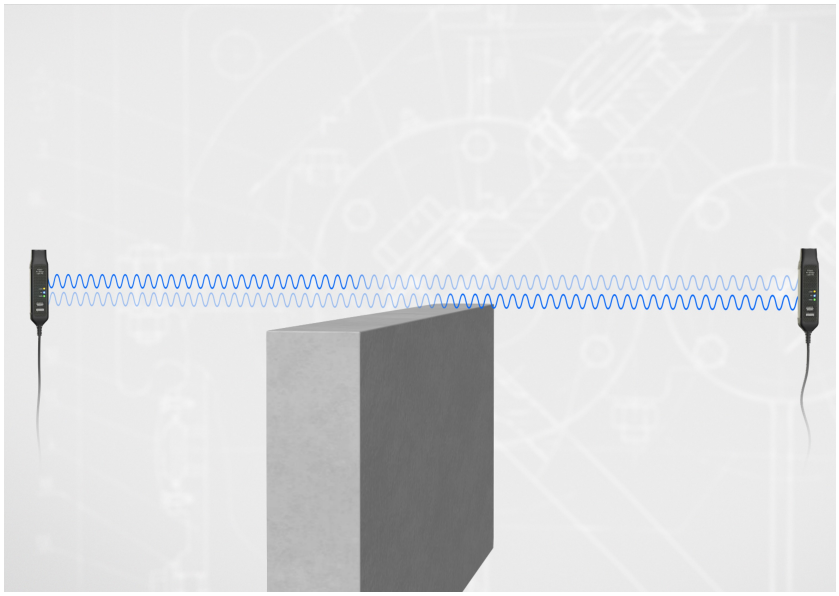

Figure 2: Obstacles should be kept away from the line-of-sight path.

A very short distance between Kvaser Air Bridge devices may result in disturbance to the radio link.

Rule 2. Align devices with each other

Ensure that the Kvaser Air Bridge devices are mounted parallel to each other. In most cases, when the line-of-sight path is horizontal, the Kvaser Air Bridge devices should be positioned vertically.



Figure 3: Radio devices aligned in parallel is preferable.

Where the Kvaser Air Bridge devices are placed at a height that is greater than the distance between them, it may be an advantage to tilt them.

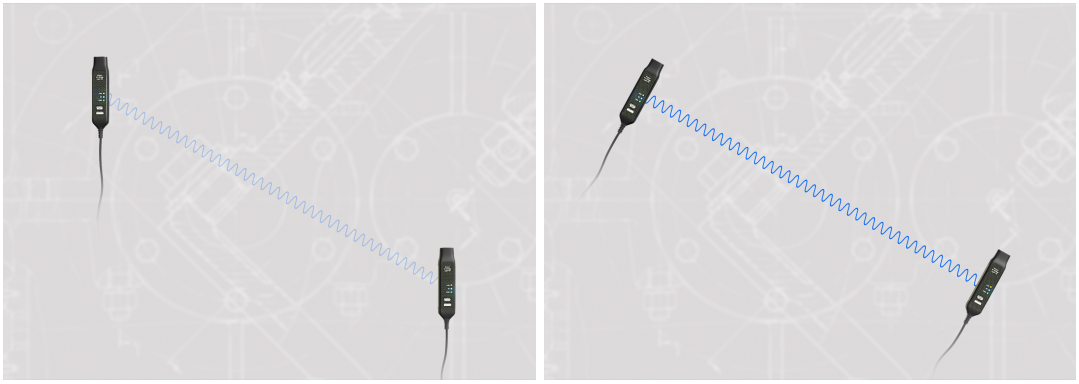

Figure 4: Tilting may improve signal when height difference is obvious.

Rule 3. Keep devices away from walls

Maximize distance between the Kvaser Air Bridge devices and nearby vertical structures, such as walls. If possible, position the Kvaser Air Bridge devices so that signals reflected in these structures will have less impact on the transmissions. The impact of reflections depends on the extension of the walls and on the distances from it.

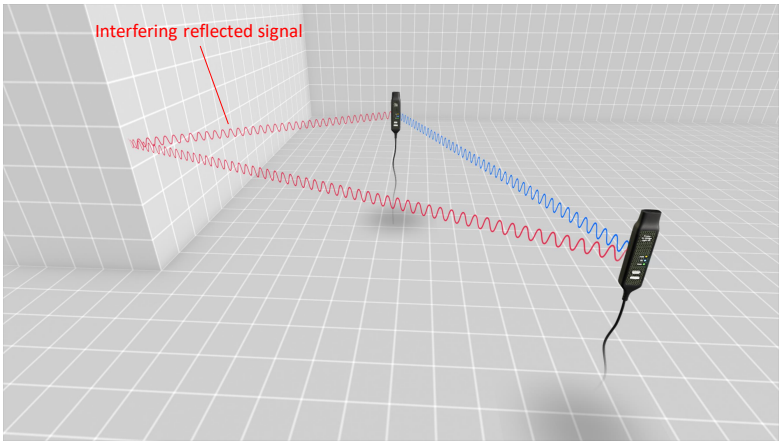

Figure 5: Signals reflected in walls may have an impact on transmissions.

Preferably, the mean (or average) distance from the devices to a wall should be at least one tenth of the line-of-sight distance. If the devices, for example, are deployed 30 m apart, then the mean distance to a wall/s should be 3 m or more.

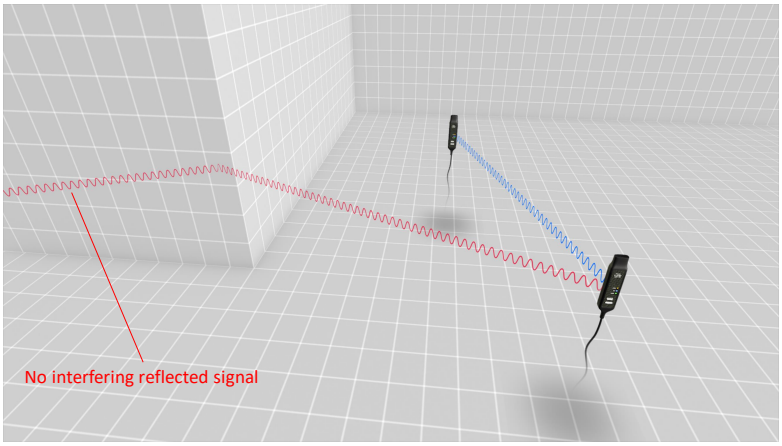

Figure 6: Not all walls cause interference reflections.

The maximum distance will depend on the installation and on the physical environment in which the Kvaser Air Bridge is used, i.e. structures, emitters etc. The Kvaser Air Bridge is designed for maximum range with an 18 dBm output power and a low noise amplifier for high sensitivity. Adhering to the presented rules of thumb will enable the system to make the most of the Kvaser Air Bridge's characteristics in order to obtain communication distances well exceeding the 30 m mentioned above. If you require further assistance on the subject, please contact Kvaser Support.

Rule 4. Optimize Kvaser Air Bridge device heights

Radio signals reflected in the ground are important but generally cannot be avoided. Whilst you can't change ground reflections, altering the height of the Kvaser Air Bridge devices can result in a positive impact on the transmission. This fact opens up an interesting opportunity for optimizing the performance.

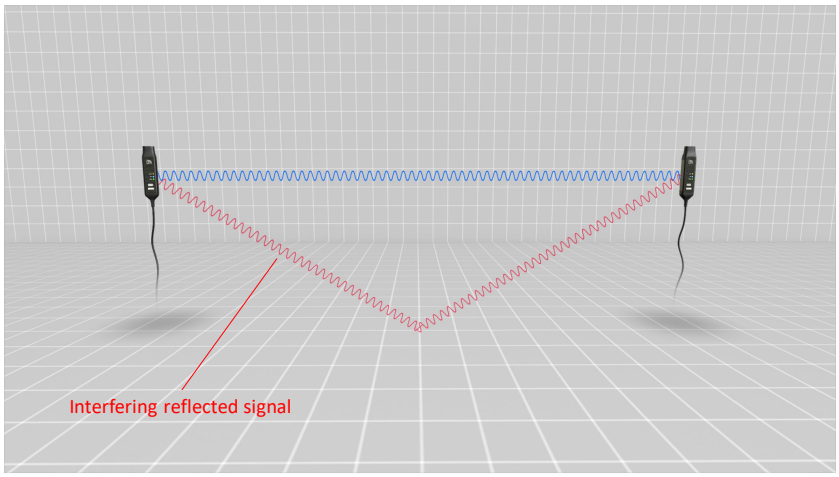

Figure 7: Signal reflected in ground or floor.

For indoor use, optimizing performance becomes more complicated but may still be worthwhile in situations involving interfering emitters. Of course, walls may have an impact too if they are at close range.

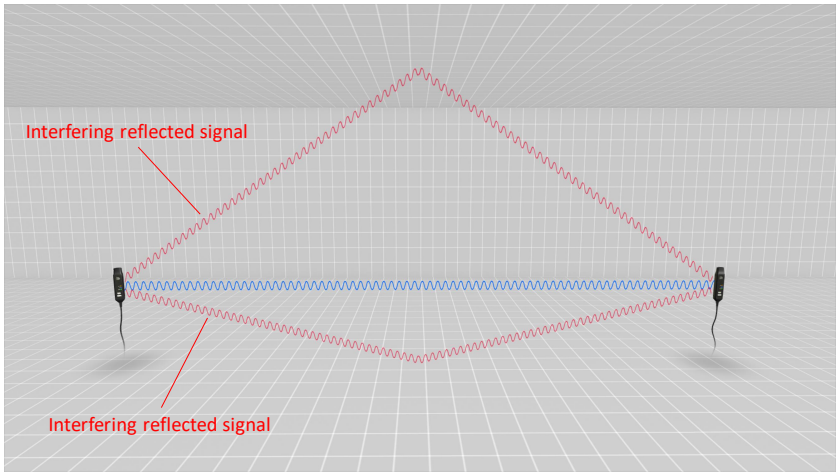

Figure 8: Signal reflected in floor and ceiling.

In theory, based on the distance between devices, an antenna height that accords with the red line in Figure 9 on Page 16 would be worth experimenting with in order to optimize performance.

The heights in the graph can be applied for distances between Kvaser Air Bridge devices above 10 m. For indoor use, the example in the graph can be applied up to a distance of approximately six times the ceiling height.

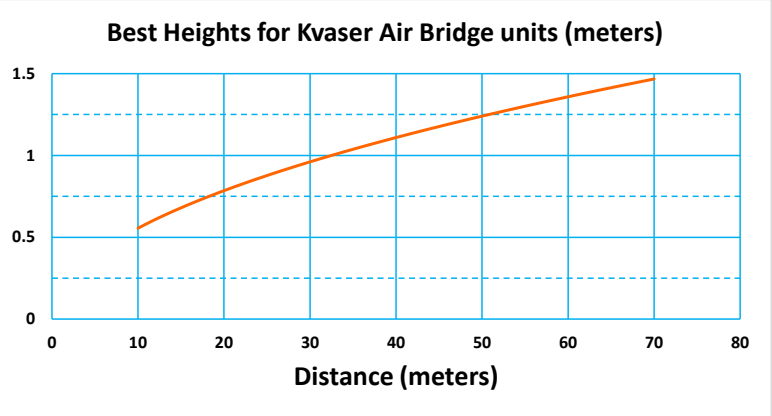

Figure 9: Examples of antenna heights that may optimize performance.

If the Kvaser Air Bridge devices are installed at different heights, then, in order to apply this rule, it's best to calculate the square root of the two heights multiplied by each other. For example, a recommended height of 1.4 m can be met with two different heights at 1 and 2 m. Often, simply the average height will be close enough.

Reflections from the ceiling generally only merit consideration when the line-of-sight distance is greater than six times the ceiling height. If you require tailored advice on this topic, please contact Kvaser Support.

Rule 5. Reduce interference from other emitters

Other equipment that uses the 2.4 GHz ISM band should not normally interfere with Kvaser Air Bridge. Should you have doubts, you could try temporarily turning them off or try to place the Kvaser Air Bridge device further away from the suspected source of interference.

Wi-Fi hotspots may be reconfigured to use other Wi-Fi modes or another frequency band, e.g. the 5 GHz ISM band.

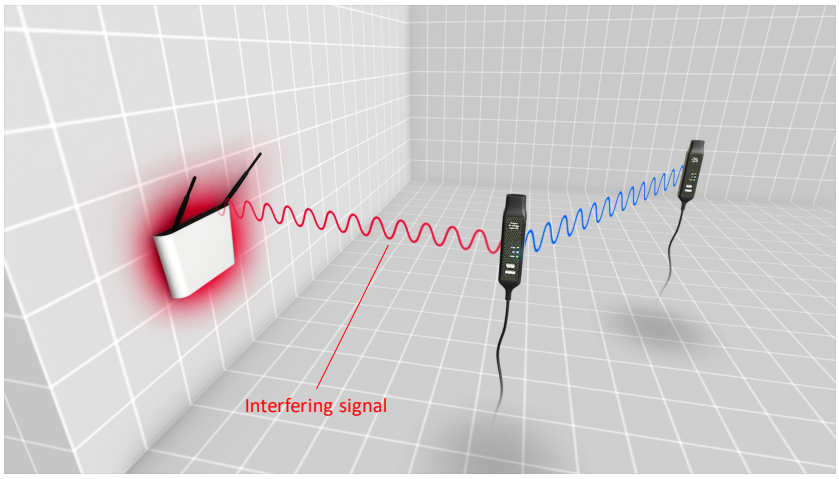

Figure 10: Possible interference from nearby radio emitters.

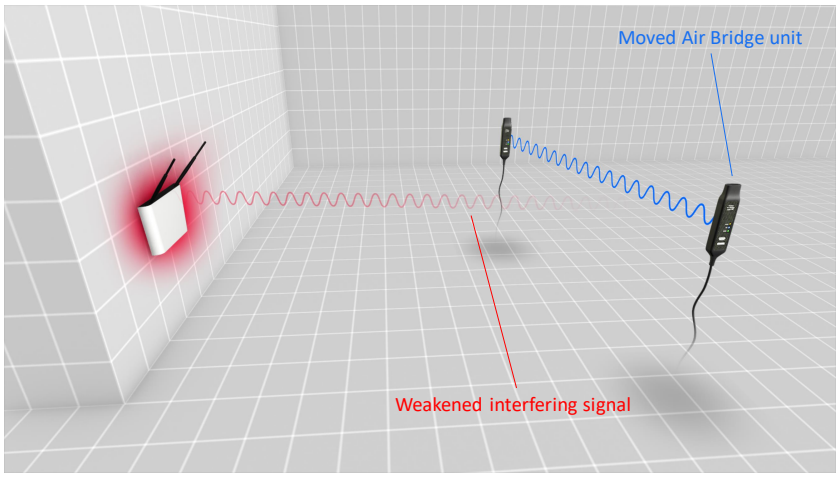

Figure 11: Reduction of radio interference by increased distance.

Note that microwave ovens and motors may also emit energy that interferes with radio devices.

Rule 6. Adjust location or heights

There may be locations where the signal level is weakened due to interference caused by reflected radio waves in the ground, floor, walls and ceiling, so-called multi-path interference. This may be overcome by changing the location of one of the Kvaser Air Bridge devices or both.

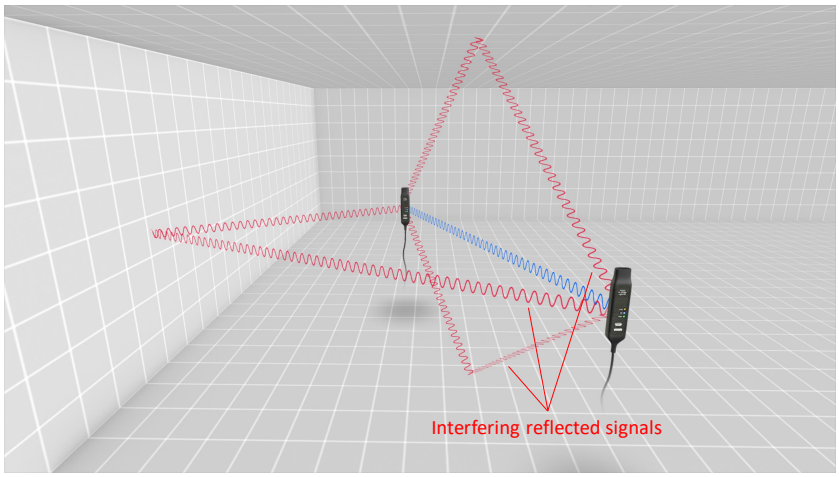

Figure 12: Multipath interference caused by ground, floor, walls and ceiling.

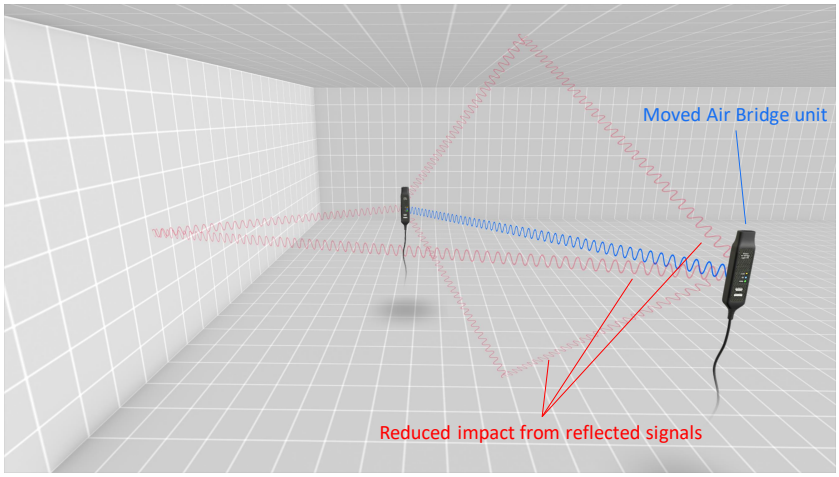

Figure 13: A slight adjustment in location may improve signal conditions.

5 Radio propagation considerations

5.1 Antenna radiation

One of the most common antennas used for radio communication is the dipole antenna. An ordinary dipole antenna has an antenna pattern which is “omnidirectional”, meaning a horizontal 360 degree coverage when it is mounted vertically, which is normally the case. The dipole antenna, however, does not exhibit a fully spherical coverage. In fact, a vertically mounted dipole antenna radiates less in upwards and downwards directions and most along the horizontal plane. The radiation pattern of the Kvaser Air Bridge is pretty much like that of a dipole antenna and the corresponding pattern for a receiving antenna is more or less identical. See Figure 14 for a depiction of the radiation intensity around a dipole antenna.

5.2 Polarization

All radio waves are in some way polarized and the dipole antennas always emit linearly polarized radio waves. If a dipole antenna is mounted vertically, the radio waves that propagate along the horizontal plane are said to be vertically polarized, regardless of the azimuth in which they propagate. The best reception of radio signals in this case is obtained if the receive dipole antenna is oriented vertically as well. Normally, the orientation is not all that critical, but may be worth while considering. In essence, the orientation of a dipole antenna should be perpendicular to the three-dimensional direction of propagation (dashed line in Figure 14), and the one-dimensional extension of the dipole should be in the same plane (pink plane in Figure 14, representing the polarization of the electrical field component of the radio wave) as the other dipole antenna with which it is intended to communicate. Dipoles are depicted as black rods in Figure 14.

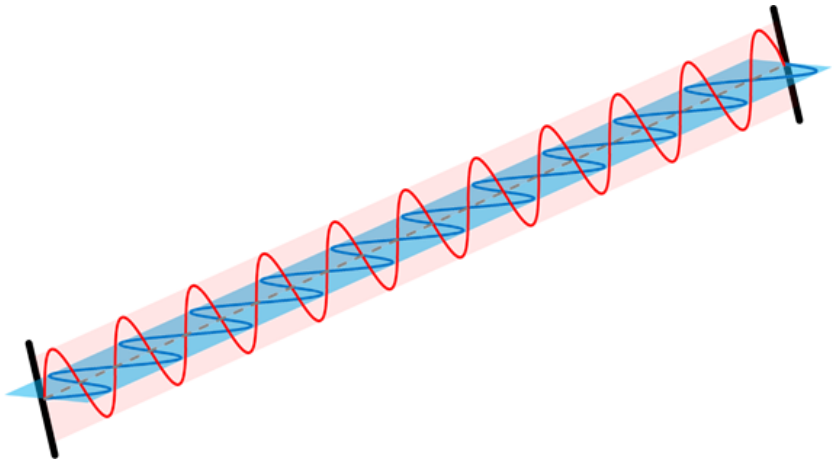

Figure 14: Electromagnetic wave and dipole antenna orientation.

5.3 Free space propagation

Radio signals as they travel through space have a power level that decreases with distance. This reduction in power level is often referred to as free space loss, even though it in fact is a result of spreading the power over a greater area or cross section. The power level is hence reduced by a factor four if the distance is increased by a factor two. The same applies to emitted interference. Therefore, increasing the distance to a source of interference may be just as relevant as reducing the distance between communicating radios.

5.4 Attenuation

Radio signals may pass through different materials but will then experience an attenuation or weakening of the power level, partly due to energy absorption. Besides thickness, the attenuation depends heavily on material. Non-metallic materials such as wood and plastic, e.g. cause relatively limited attenuation whereas metals may essentially block the radio waves. Also, denser materials such as concrete walls generally cause more attenuation than wood or plastics. Also, grids and meshes will cause attenuation depending on the wavelength of the radio waves. Sheet metals and meshes of metal wires are also commonly used as shields to protect from unwanted radio waves.

5.5 Reflection

Radio waves that encounter an object may to an extent pass through that object or be absorbed in the object. This depends on the electrical and magnetic properties of the object's material. The energy that doesn't pass through or becomes absorbed will be reflected. Hence, a reflected radio wave may be reduced in strength but not necessarily that much. This also depends on the incident angle between the radio wave and the object's surface. The angle of reflection is always equal to the incident angle and the reflected radio wave will experience a certain phase shift that depends on incident angle and material properties.

5.6 Multipath interference

A transmitted radio signal may reach a receive antenna in multiple ways. Normally, in line-of-sight conditions there will be a direct wave from the transmitter. But there may also be several indirect radio waves that are the result from reflections in the floor, walls etc. These waves combine in the receiving end which will have an impact on the signal level. The resulting signal may be either strengthened or weakened depending on the strengths of the reflected radio waves and their phase in relation to the direct wave. This phenomenon is commonly known as multipath interference. The strength and phase shifts depend on the traversed length of the radio wave and the strength and phase shift of the reflections.

6 Radio performance considerations

This section describes the underlying physical phenomena behind the 'rules of thumb'. It provides a detailed look at considerations related to interference and radio link performance.

6.1 Signal to noise ratio

For optimal communication, a radio signal needs a certain advantage over noise in the receiver: a minimum signal-to-noise ratio (SNR). Figure 15 shows the power level of a radio signal in the presence of noise that a receiver needs to cope with.

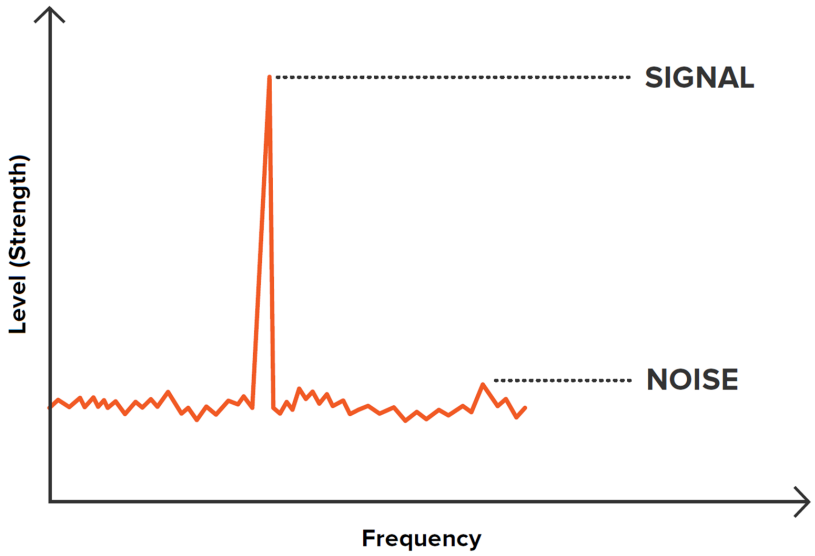

Figure 15: A radio signal in the presence of noise.

Noise in the receiver consists of internal noise in the receiver circuitry and external noise that is picked up by the antenna. The noise may hence emanate from any interfering emitter.

6.2 Link margin

In practice, further advantage is required to counter the effects of signal strength variation and radio interference. This additional advantage is often referred to as "link margin". The link margin corresponds to the longest practical communication distance. This includes consideration of interference and other negative effects on the radio signal propagation that may be caused by the surrounding physical structures and atmospheric conditions such as rain. For this reason, the link margin may need to take into account both the negative impact of interfering emitters in the nearby area and the negative effects on the radio wave propagation. These negative effects combine, and the appropriate link margin may well be

different depending on use cases and scenarios. Also, the desired performance level of the radio link, usually capacity and packet error rate, will greatly influence the determination of what is an adequate link margin and what is an insufficient link margin.

6.3 Interference by other emitters

Emitters close to the Kvaser Air Bridge devices can affect the reception of the radio signal and the transmitter function of the Kvaser Air Bridge devices.

Emitters may interfere in such a way that noise from emitters adds to the internal noise of the receiver within the Kvaser Air Bridge device, resulting in a reduced link margin.

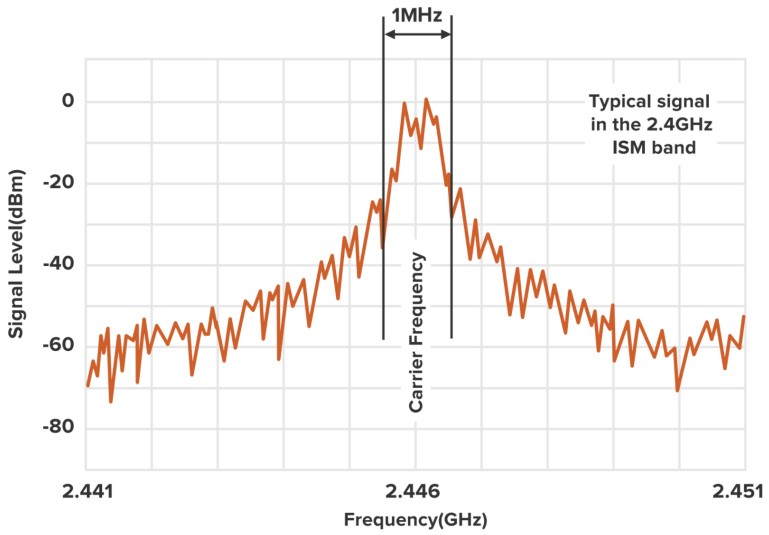

Figure 16: A typical radio signal from a 2.4 GHz transmitter.

Figure 16 shows an example of the spectrum of a transmitted signal with a 1 MHz occupied bandwidth. The elevated power level near the carrier frequency, shows clearly that the transmitted energy may have an impact on nearby receivers being tuned to a frequency close to that of the transmitter.

In the case of very close emitters, the signal itself can block the receiver circuitry in any radio device.

Emitters may also interfere in such a way that a radio device regards the presence of radio energy as if that particular frequency is occupied and therefore choses to transmit on the next available frequency.

6.4 Interference countermeasures

As all emitters certified for use in the 2.4 GHz ISM band do not simultaneously occupy the whole frequency band, an emitter within interfering distance of a Kvaser Air Bridge device will not normally interfere with all of the frequencies employed by a Kvaser Air Bridge. The frequency hopping approach used by the Kvaser Air Bridge waveform is designed to provide the best combination of throughput and latency, especially in the presence of interfering emitters. Kvaser Air Bridge provides a retransmission procedure to reduce the impact of packet errors and thereby to secure the transfer of messages.



As demanded by the relevant standards, the Kvaser Air Bridge's frequency hopping approach ensures the coexistence of other radio transceivers in the same band. Nevertheless, these other transceivers may experience a degraded throughput when used in very close proximity to a Kvaser Air Bridge device.

7 Document Revision History

Version history for document IN_98234_air_bridge_installation_guide:

Revision	Date	Changes
1.0	2021-03-16	Initial version.
2.0	2024-02-01	Updated the introduction section.
2.1	2024-03-15	Updated Kvaser logo.
2.2	2024-09-04	Updated the introduction section. Minor textual changes.
3.1	2025-01-24	Updated information about co-existing radio devices.